



**Soft Link Installation Instructions**

Sport Main

SM-1

Not for Tandem or Reserve use


Performance Designs Inc  
1300 E. Int'l Speedway Blvd.  
Deland, Florida 32724 USA  
Tel: +1 (386) 738 2224 Fax: +1 (386) 734 8297  
[www.performancedesigns.com](http://www.performancedesigns.com)

**MADE IN DELAND, FL USA**

Insp: \_\_\_\_\_


Batch Lot # \_\_\_\_\_

**MAN-0016-D REV. D**

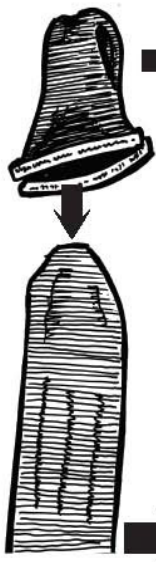


**Slink Riser Cover**  
SRC's are available as an option for those who do not wish for the slider to descend over the riser & toggles.


**Riser**

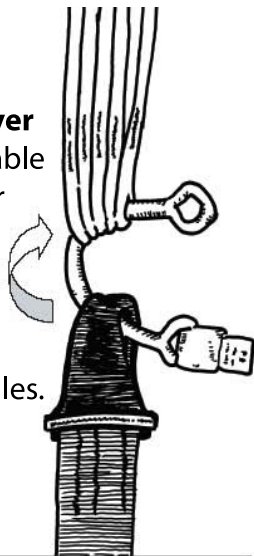


Pass slink through riser & lines

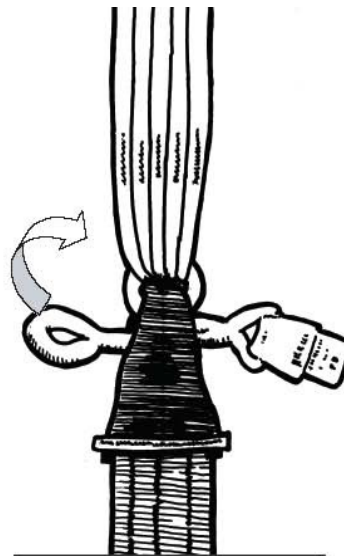



Pass slink through riser & line group a second time

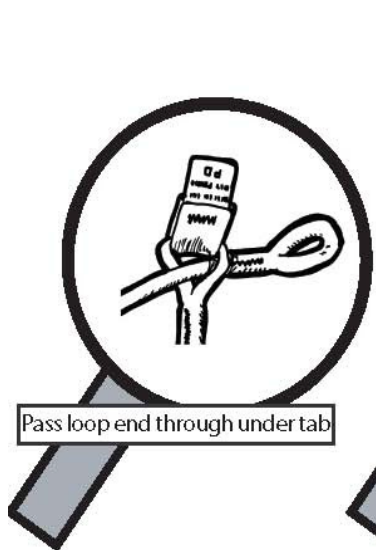

Pass loop end through under tab

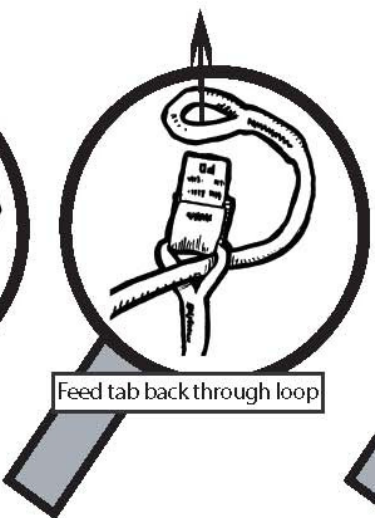

Feed tab back through loop

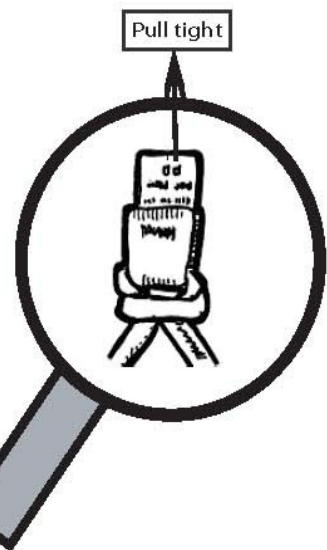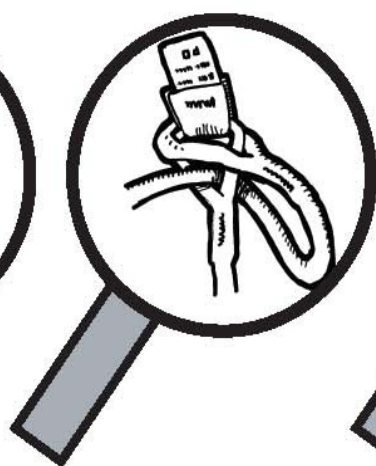

Pull tight



Tuck tab away

During the first 15-20 deployments on a set of slinks they will develop a "set". Make sure this set happens properly by keeping the Slink tab positioned inside the riser during these initial pack jobs/deployments.